

LIGHTEL

Inspection, Cleaning, Test

ArrayView™ AV-4800

Automated Inspection System for MTP Connectors

A better way to inspect MTP connectors

Lightel's ArrayView™ is a faster, easier, and more cost-effective way to inspect your MTP connectors.

Designed with both accuracy and speed in mind, the ArrayView™ automatically completes a scan and capture of the entire connector endface in under 15 seconds.


The included software provides a high-resolution image of the entire connector endface, capturing up to 48 fibers in a single file. An image sub-view beneath the main window allows for easy navigation between all fibers in the connector. Image captures can be saved at any time for documentation purposes.

ArrayView's™ software is resource-friendly and can be used on just about any Windows®-based computer.




Features

- Quickly and easily capture images to the screen
- Clean fibers without removing connector from station
- Zoom control to view multiple fibers or a single fiber at a time
- Easily navigate across the entire connector by point and click

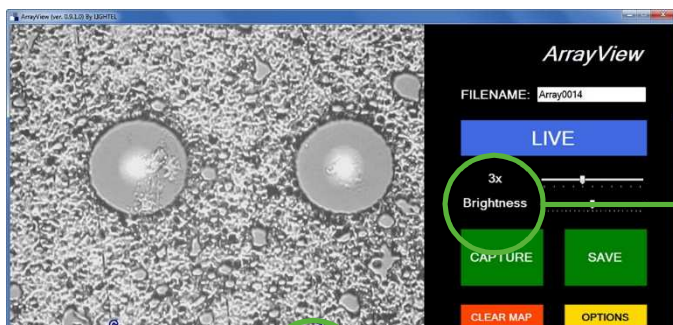

INTERLAB Sp. z o.o. | Instrumenty badawcze i pomiarowe

Kosiarzy 37 paw. 20, 02-953 Warszawa | +48 22 840 81 80 | interlab@interlab.pl | interlab.pl

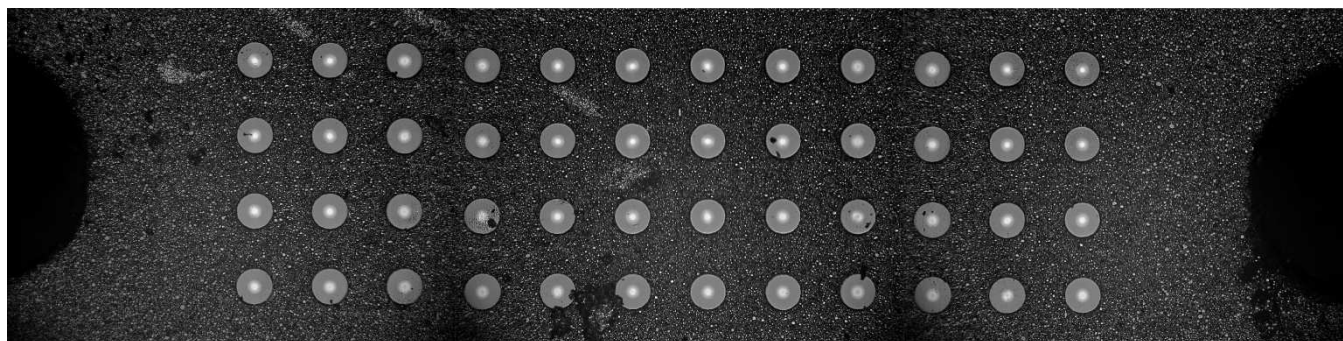

Full MTP Connector Capture

➔ Specifications

Single frame Field of View	1.52mm x 1.14mm
Total (merged) Field of View	4.5mm x 1.14mm
Theoretical Resolution	2μm
Detectable Resolution	0.5μm
Digital Zoom	6x maximum zoom
Focus	Manual adjustment range : +/-1.0mm
Y-Axis Adjustment (on connector holder)	Manual adjustment range : +/-1.0mm
Camera	5MP CMOS, USB output
Captured Image Size	7776px x 1944px
Axial Light Source	Blue LED
Power Supply	24V DC, 1.3A
Dimensions	128mm (W) x 113mm (H) x 214mm(D)
Weight	2.4kg.
Supported Operating Systems (ArrayView Software)	Windows XP®, Vista®, Windows 7®, Windows 8® 32-bit and 64-bit processors
Recommended minimum Display pixel size	1280px x 800px or 1366px x 768px

➔ Ordering Information (all ArrayView orders include one connector holder)

PC Connectors

AV-4800/PC
AV-4800/PC-AU
AV-4800/PC-EU
AV-4800/PC-UK
AV4-PC
AV4-BF

ArrayView with US style plug
ArrayView with Australian style plug
ArrayView with EU style plug
ArrayView with UK style plug
Connector Holder (only)
Bare Ferrule Holder (requires AV4-PC)

APC Connectors

AV-4800/APC
AV-4800/APC-AU
AV-4800/APC-EU
AV-4800/APC-UK
AV4-APC