


SLD0830010YY050MXXXX

Fiber Coupled Superluminescent Diode (SLD)

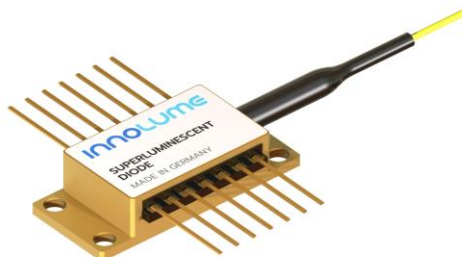

Features:

- High output power at 830nm
- Low ripples
- Strong linear polarization
- Individual burn-in and thermal cycling screening
- Polarization maintaining PM780 fiber or HI780 fiber
- 900um loose tube on fiber (optional)
- Built-in monitor photodiode (optional)

Applications:

- Fiber sensors
- Spectroscopy
- Instrumentation

Recommended Operating Conditions

@ CW, the case is mounted on room temperature heatsink

Parameter	Min.	Typ.	Max.	Unit
Chip Temperature	20	25	30	°C
Forward Current		350	420	mA
Output Power	5		50	mW

Characteristics

@ CW, 25°C, 350mA

Parameter	Min.	Typ.	Max.	Unit
Forward Current @ 50mW			420	mA
Forward Voltage		1.8	2.2	V
Mean Wavelength	820	830	840	nm
Bandwidth (FWHM)	7	10		nm
Ripples* (RMS)		0.05	0.3	dB
Polarisation Extinction Ratio (PER)	12	17		dB
Polarisation		TE		

* RMS in 1nm range around ASE maximum, 20pm resolution


Absolute Maximum Ratings

Parameter	Min	Max	Unit
Output Optical Power		100	mW
Forward Current		600	mA
Reverse Voltage		2	V
TEC Current		3	A
TEC Voltage		4	V
Chip Operating Temperature	5	40	°C
Case Operating Temperature	0	70	°C
Storage Temperature	-40	85	°C
Pin Soldering Temperature (max 10 sec, max case temperature 120°C)		300	°C
Fiber Band Radius	3		cm


Typical Performance (for reference only)

@ CW, the case is mounted on room temperature heatsink


Light-Current-Voltage Characteristics

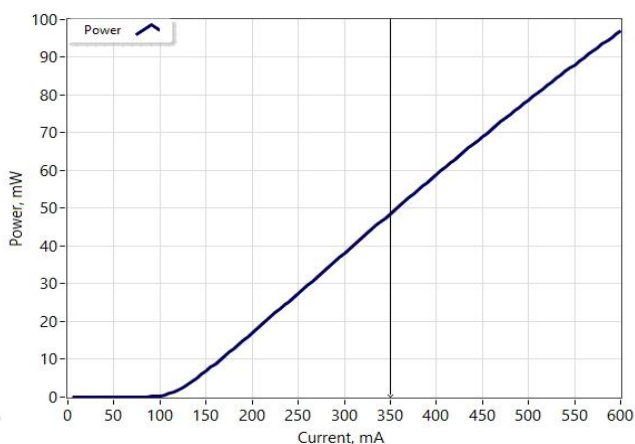

Optical Spectra (res. 1nm)

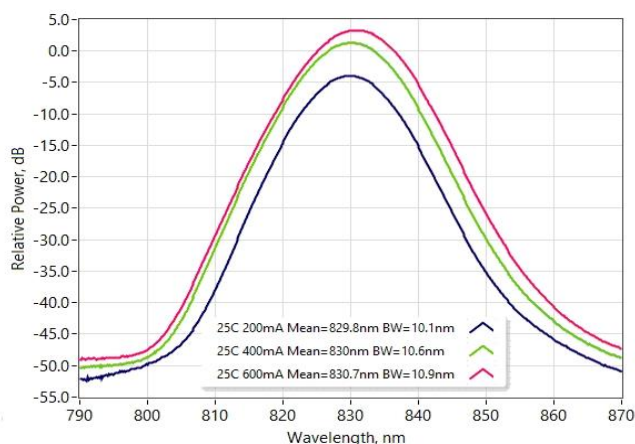


Thermistor specification			Fiber specification			
Parameters	Value	Unit	Parameters	Value	Value	Unit
Type	NTC		Fiber Type	HI780	PM780	
Resistance @ 25°C	10±0.1	kOhm	Numerical Aperture (Typical)	0.14	0.12	
Beta 25-85°C	3435±1%	K	Cut-off Wavelength	720±50	710±60	nm
			Mode-Field Diameter	4.6±0.5 @ 780nm	4.6±0.5 @ 780nm	µm
			Cladding Diameter	125±1	125±1	µm
			Coating Diameter	245±15	245±15	µm
			Loose Tube Diameter (optional)	900	900	µm
			Connector	FC/APC	FC/APC	
			Key	narrow	narrow	

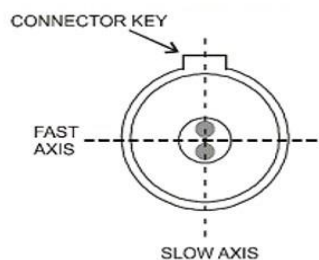

The output light is polarized along the slow axis of PM fiber.

Dimensions (in mm)

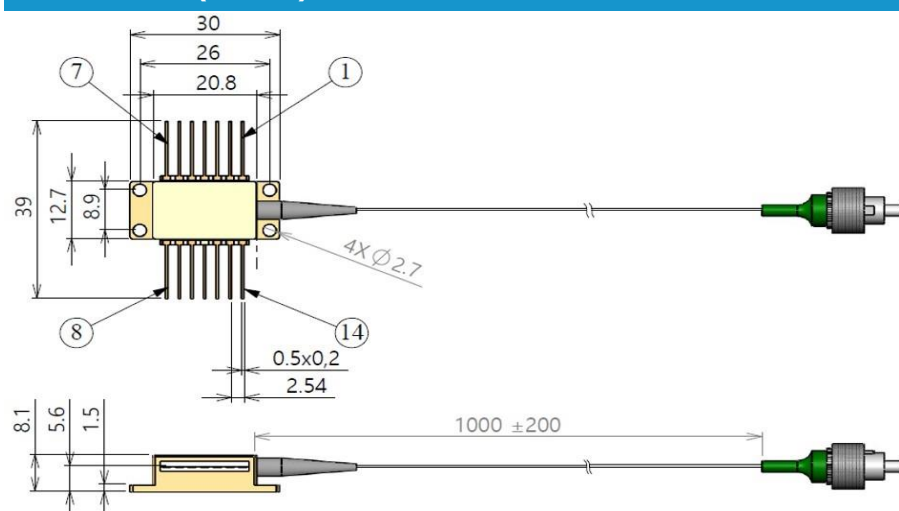

Pin identification:

1. TEC "+"
2. Thermistor
3. Monitor PD anode (Bias "-")
4. Monitor PD cathode (Bias "+")
5. Thermistor
6. -
7. -
8. -
9. -
10. LD anode ("+")
11. LD cathode ("-")
12. -
13. Case
14. TEC "-"

Safety and Operating Instructions

The light emitted from this device is invisible and can be harmful to the human eye. Avoid looking directly into the fiber connector when the device is in operation. Proper laser safety eyewear must be worn during operation with open connector. Absolute Maximum Ratings may be applied to the device for short period of time only. Exposure to maximum ratings for extended period of time or exposure to more than one maximum rating may cause damage or affect the reliability of the device. Operating the device outside of its maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed such that the maximum forward current cannot be exceeded.

A proper heatsink for the device on thermal radiator is required. The device must be mounted on radiator with 4 screws (bolt down in X-style fashion with initial torque set to 0.075Nm and final X-style bolt down at 0.15Nm) or with clamps. The deviation from flatness of radiator surface must be less than 0.05mm. It's recommended using of Indium foil or thermal conductive and soft material between bottom of the case and heatsink for thermal interface. It's undesirable to use thermal grease for this. Avoid back reflection to the device. It may give impact on the device performance in aspects of spectrum and power stability. It also may cause fatal facet damage. Using of optical isolators is highly recommended to block back reflection.

Do not pull the fiber. Do not bend a fiber with a radius smaller than 3 cm. Fiber tip should always be protected from any contamination or damage during the process of installation. After removing the dust-preventing cap covered at fiber tip, carefully clean fiber tip by wiping through one direction using optical lens cleaning paper or cotton swab dabbed with Iso-Propanol or Ethyl alcohol. Operate the device with clean fiber connector only.

Electrostatic discharge is the primary cause of unexpected product failure. Take extreme precaution to prevent ESD. During device installation, ESD protection has to be maintained - use wrist straps, grounded work surfaces and rigorous antistatic techniques when handling the product.



Part-number Identification

SLD0830010HI050MXXXX -> 50mW output power at 830nm mean wavelength and 10nm bandwidth, HI-780 fiber
SLD0830010HI050MFXXX -> 50mW output power at 830nm mean wavelength and 10nm bandwidth, HI-780 fiber, with built-in monitor photodiode
SLD0830010PM050MLXXX -> 50mW output power at 830nm mean wavelength and 10nm bandwidth, PM-780 fiber, with loose tube
SLD0830010PM050MFLXX -> 50mW output power at 830nm mean wavelength and 10nm bandwidth, PM-780 fiber, with built-in monitor photodiode and fiber loose tube

NOTE: Innolume product specifications are subject to change without notice