

Air Duster Lens Cleaner / Lens Paper

CD-31ECO
SLC / SLP
CD-31ECO
Catalog Code W3467

Cleaner to blows dust and dirt from optics with clean compressed gas.



- This is an environment friendly non-flon type air duster.
- The liquid are not come out from the container even if the container is turned upside down.
- Please wipe off terrible dirt with a lens paper impregnated with a lens cleaner first, and it is effective to use this item as finishing or after installing the optics in the holder.
- Ideal for removing the dust from mirror surface which is not suited to wipe such as gold coated mirror.

Attention

- ▶ Pay close attention to not to bring fire (including sparks due to static electricity etc) close to staying gas or liquefied gas to avoid catching fire.
- ▶ Do not store in locations with temperatures of 40°C or above for extended periods. Do not incinerate after use.
- ▶ This item is prohibited to bring into the airplane and to transport by air.
- ▶ This item may spray liquid at first use. Spray once in another direction to confirm that no liquid is ejected before use on optical surfaces.

Specifications

Part Number	Capacity (m l)	Accessory	Ingredient
CD-31ECO	350	nozzle (approx. 130 mm)	Diethyl ether, carbon dioxide

SLC
Catalog Code W3159


Our special formulated optics cleaner is designed to remove stubborn stains, fingerprints and foreign particles while being gentle to optics.

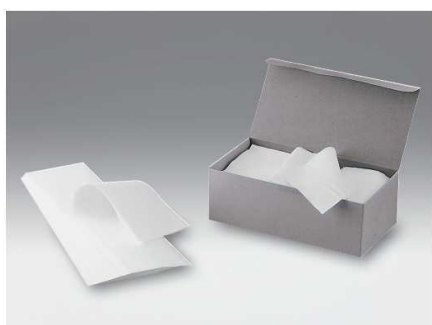
- Removes stains, fingerprints, and foreign particles without damaging optics such as lenses, mirrors, or prisms.
- Use the lens cleaner with the lens paper (optional).
- SLC2-300 adopts flip top cap and has excellent sealability.

Attention

- ▶ *Japanese Domestic Sales Only
- ▶ Do not use lens paper or wiping cloth to clean soft surfaces such as single-layer metallic film (aluminum, gold, etc.), special coatings, crystals (Glan Thompson Prism), and other equipment.

Specifications

Part Number	Capacity [cc]	Hydrocarbon Solvent [%]	Antistatic agents [%]
SLC2-300	300	95	5

SLP
Catalog Code W3160


Lens papers for cleaning optics such as lenses, prisms, or mirrors.

- Use the SLP-1 paper for relatively scratch resistant materials such as BK7 and quartz materials and the SLP-2 paper for hard-coated and soft products.
- Each pack contains 100 sheets.

Specifications

Part Number	Size [mm]
SLP-1	80×300
SLP-2	100×200

Application Systems

Optics & Optical Coatings

Opto-Mechanics

Bases

Manual Stages

Actuators & Adjusters

Motorized Stages

Light Sources & Laser Safety

Index

Guide

Mirrors

Beamsplitters

Polarizers

Lenses

Multi-Element Optics

Filters

Prisms

Substrates/Windows

Optical Data

Maintenance

Cleaning Tools

Cabinets